 



## Bare Fiber Adapters

### Description:

- Simply strip and cleave your fiber and insert into the Bare Fiber Adapter
- Broken fibers are removed with piano wire allowing hundreds of insertions
- Accommodates 125  $\mu\text{m}$  clad fiber with Insertion loss < 1 dB

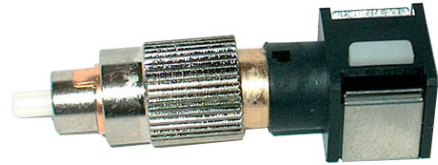

 
### Specifications:

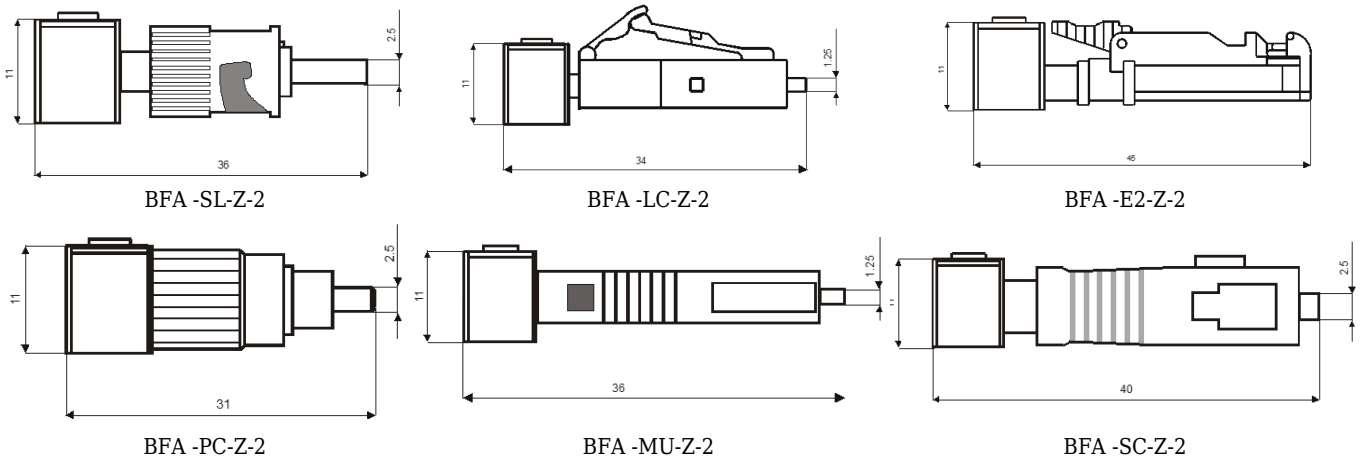


### Samples of Bare Adaptors:




BFA -PC-Z-2

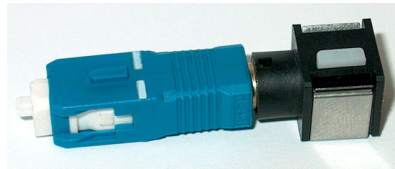


BFA -SC-Z-2

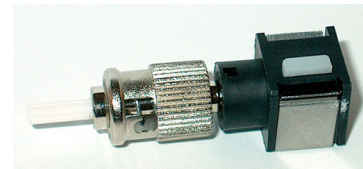


BFA -SL-Z-2

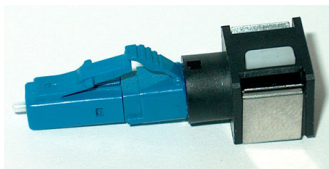

BFA -LC-Z-2

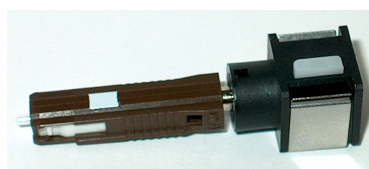

BFA -MU-Z-2

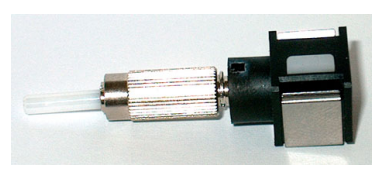

BFA -DIN-Z-2

**Application:**

- Quick terminating fibers
- Cable checking
- Fiber optic component production

**Ordering code:**

**BFA - AA - X - X**

<b>XX - Connector Type</b>	
<b>SL</b>	ST
<b>SC</b>	SC
<b>PC</b>	FC
<b>E2</b>	LSH (E2000)
<b>LC</b>	LC
<b>MU</b>	MU
<b>SK2</b>	SMA905
<b>SK1</b>	SMA906

<b>Diameter of the Ferrule</b>	
<b>1</b>	125 µm
<b>2</b>	126 µm
<b>3</b>	127 µm
<b>4*</b>	140 µm

<b>Z</b>	zirconia ferrule material
<b>M*</b>	metal ferrule material